

Novotron 502 MAX43-2




Novotron 504 MAX43-4.1




D Batteriewechsel
GB Changing the battery
F Changement des piles
NL Vervangen van de accu
E Cambio de la pila
I Cambio della batteria
PL wymiana baterii
PT Substituição das pilhas
CZ Výměna baterie
EL Αλλαγή μπαταριών


HU Elemcsere
HR Zamjena baterijal
SL Zamenjava baterij
DN Batteriskift
N Batteriskifte
S Batterbyte
FI Patterinvaihtol
LIT Baterijų keitimas
RU замена батарее
TR Pil deöblirme

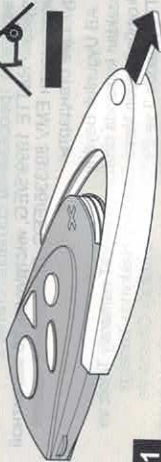

1

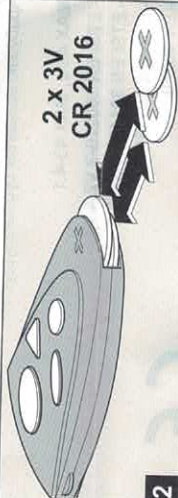


2

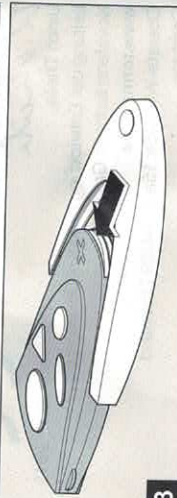


3

 
D Einlernen Startfunktion / Zusatzfunktion
GB Teach-in start function / additional function
F Apprentissage fonction démarrage / Fonction complémentaire
NL Aanleren van de startfunctie / extra functie
E Memorización de la función de arranque / función adicional
I Apprendimento funzione di avviamento / funzione supplementare
PL kodowanie funkcji start / funkcja dodatkowa
PT Memorização função de arranque / função adicional
CZ Zadat startovací funkci / dodatečnou funkci
EL Εκδόση λειτουργία εκκίνησης / πρόσθετη λειτουργία
HU Indítási funkció / kiegészítő funkció betanítás
HR Inicijalno programiranje startne funkcije/dodatne funkcije
SL Učenje vklopa / dodatnih funkcij
DN inlæring startfunktion / ekstra funktion
N inlæring startfunktion / tilleggsfunksjon
S Lära in startfunktion / tillsatsfunktion
FI Käynnistystoiminnon / lisätoiminnon opettaminen
LIT Įjungimo ir papildomos funkcijos programavimas
RU обучение функции запуска / дополнительная функция
TR Başlatma Fonksiyonunu / Ylave Fonksiyon Hakkında



1

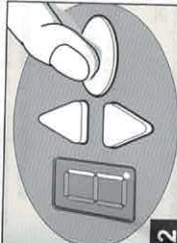


2

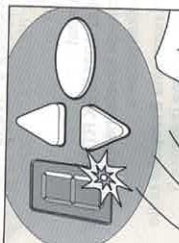


2 sec



3

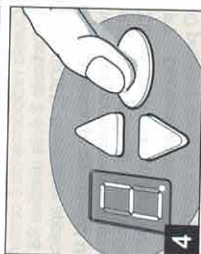

4

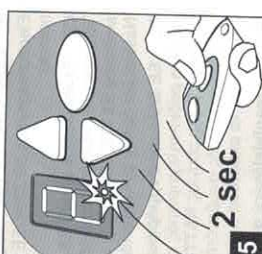

2 sec



6